

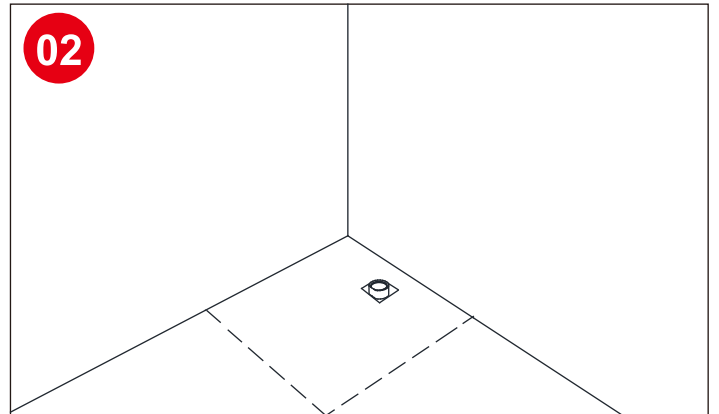
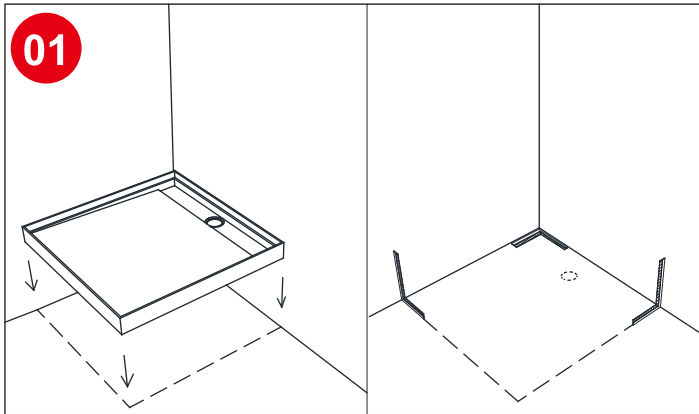



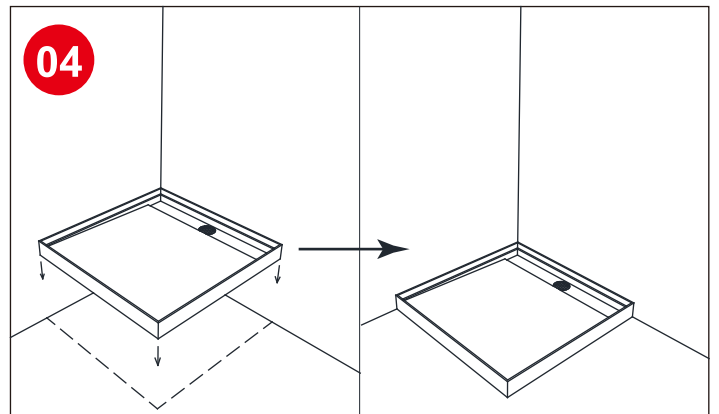


Marking the shower tray location Provide a 5"x5" opening in the sub-floor
de ducha for the drain

Use a right-angle ruler (or "L-square") The 2" PVC drain pipe must
to make sure the angle between the floor protrude above the subfloor surface,
and the wall is 90°, according to the drain installation instructions
and the height of the shower base.

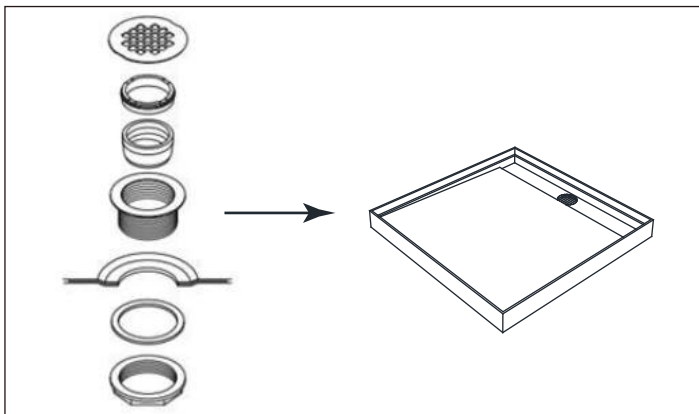

Install the shower drain (not included) Place the tray in the designated position
according to the drain instructions, making sure the drain body
sits around the drain pipe

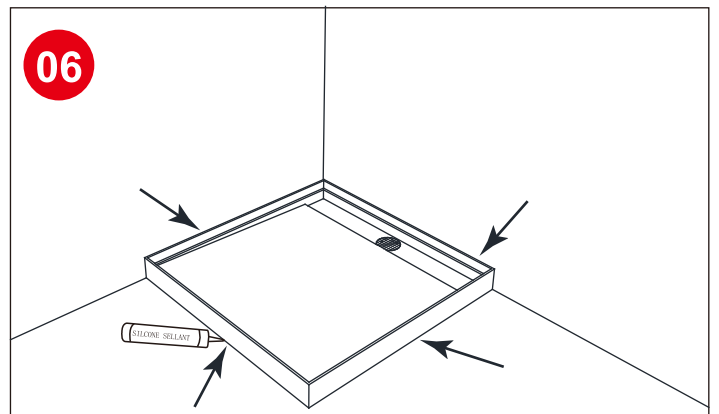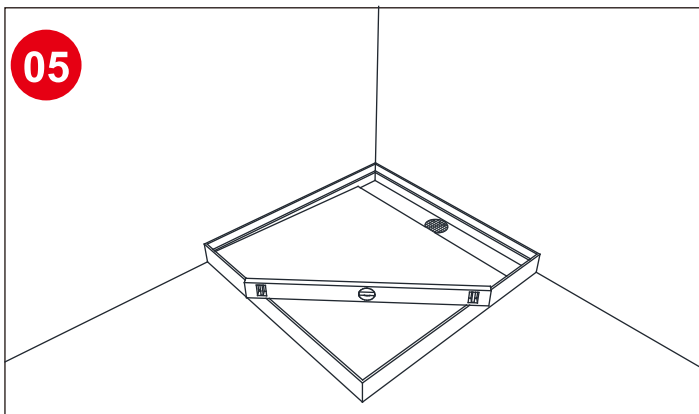

Level the tray to make sure it stays level. Use waterproof sealant to fill the
gap between the tiles and the shower base.

base.