



Installation Instructions for

the Shower Door

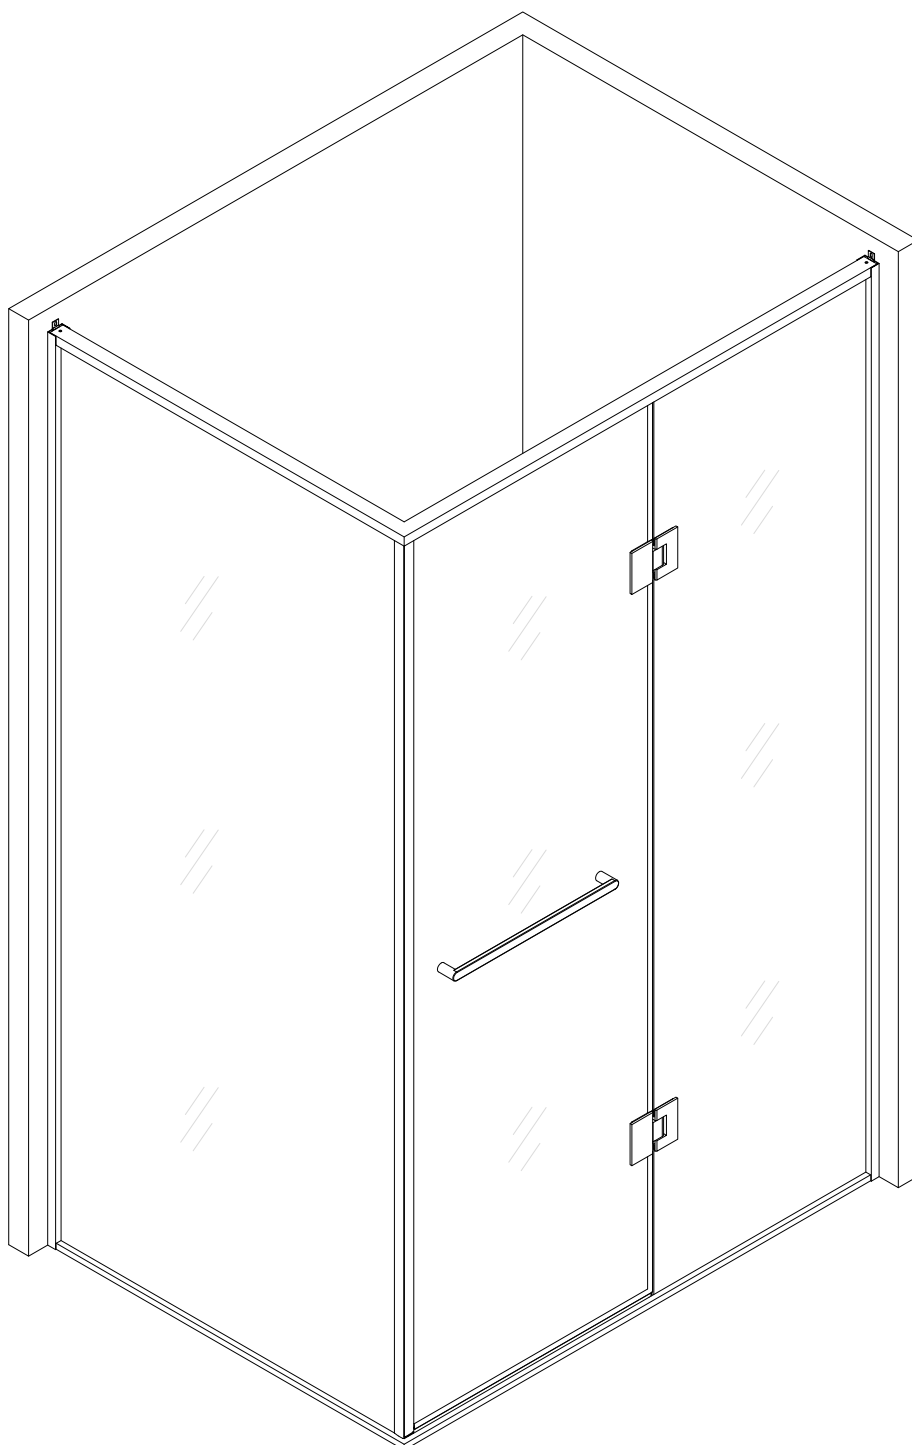













PACKAGE CONTENTS

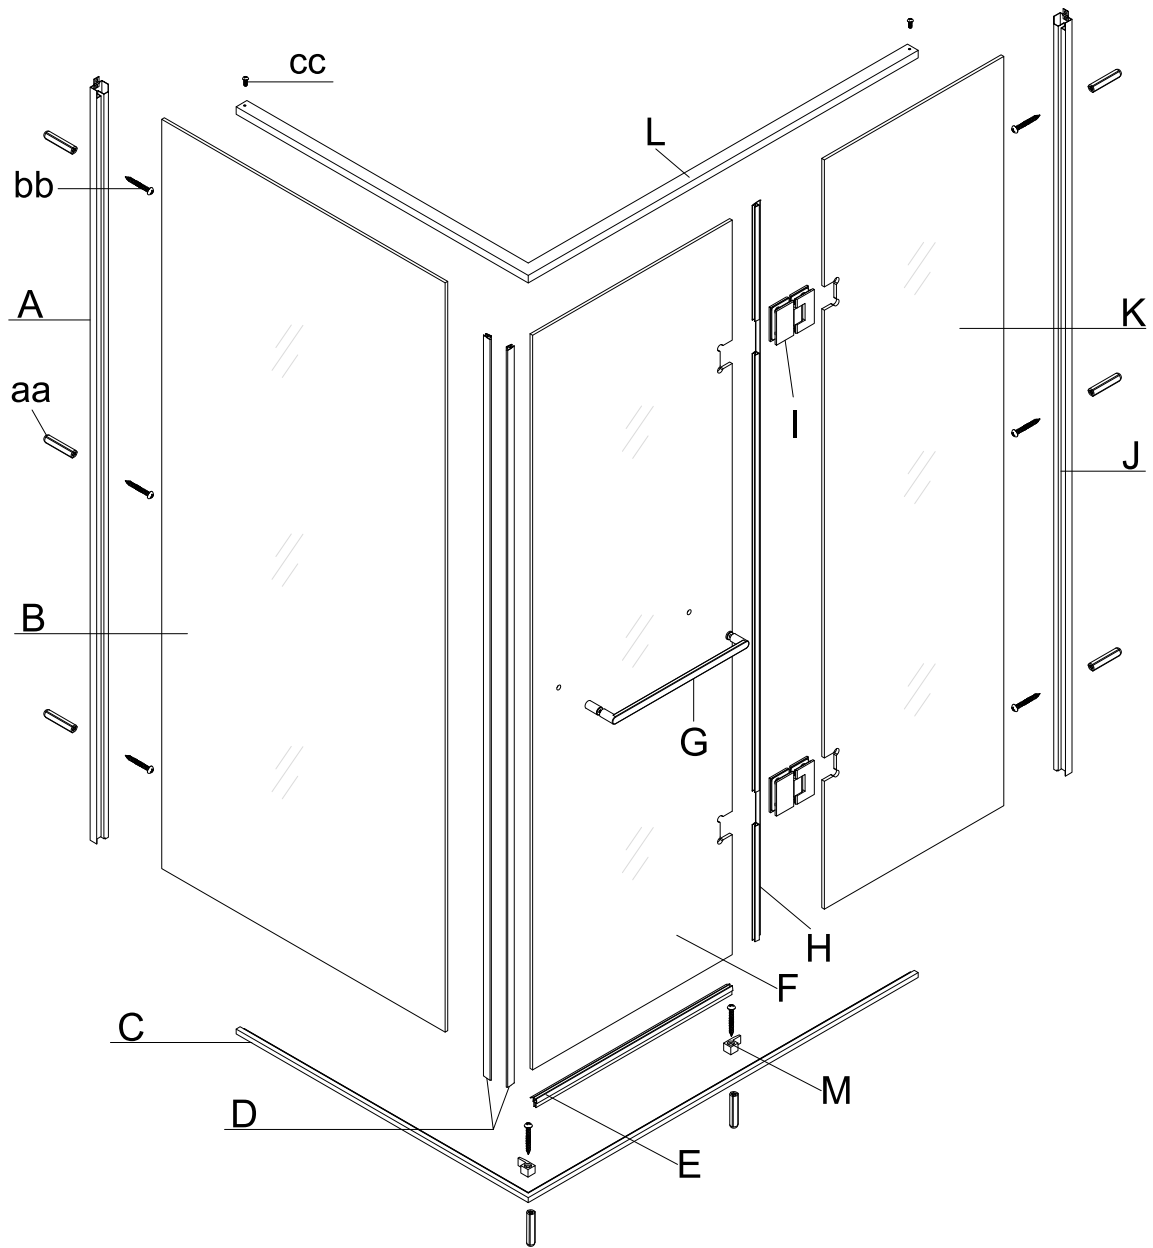




PACKAGE CONTENTS

PART NO.	DESCRIPTION	QTY.	PART NO.	DESCRIPTION	QTY.
A	Wall upright	1	G	Handle	1
B	Fixed glass-1	1	Vertical seal	1	
C	Bottom bar	1	Hinge	2	
D	Magnetic strip	2	J	Wall jamb-R	1
E	Bottom seal	1	K	Fixed glass-2	1
F	Door glass	1	L	Top bar	1
			M	Glass bracket	2


PACKAGE CONTENTS

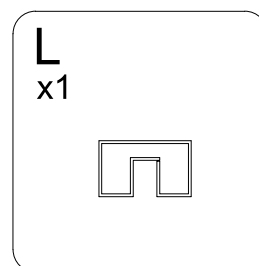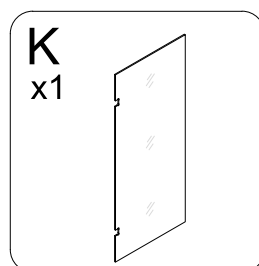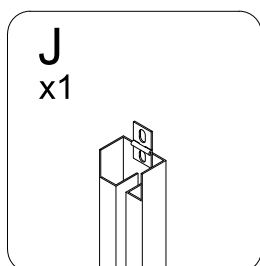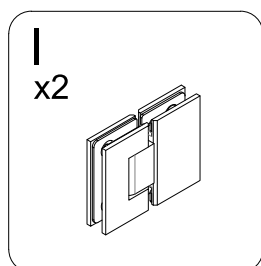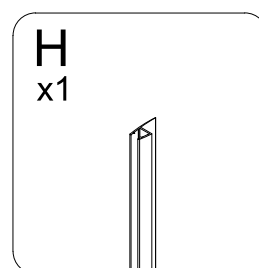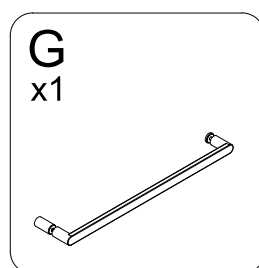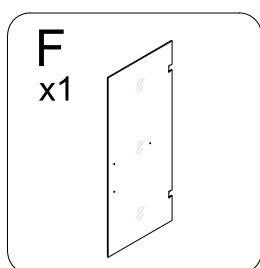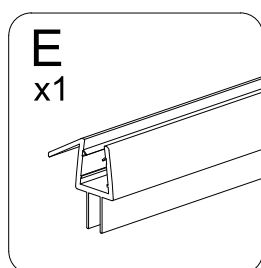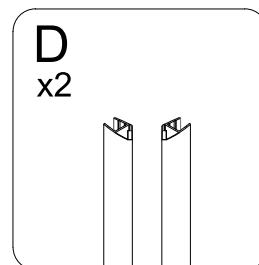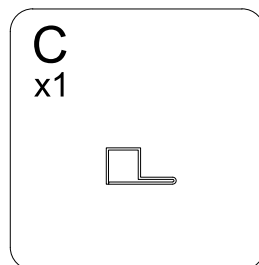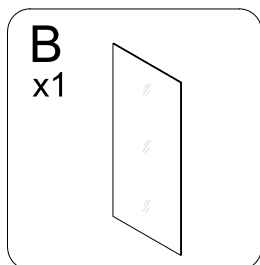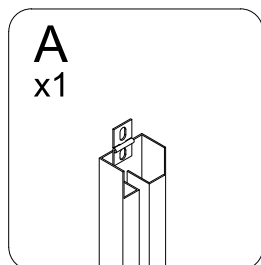

HARDWARE CONTENTS

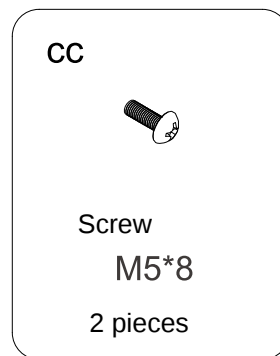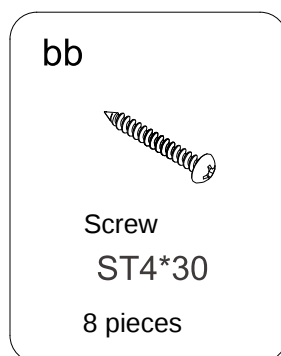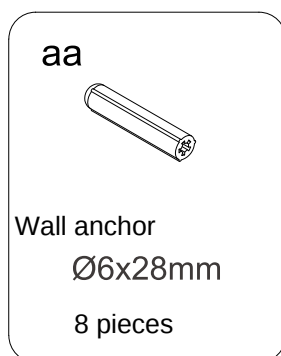

REQUIRED TOOLS

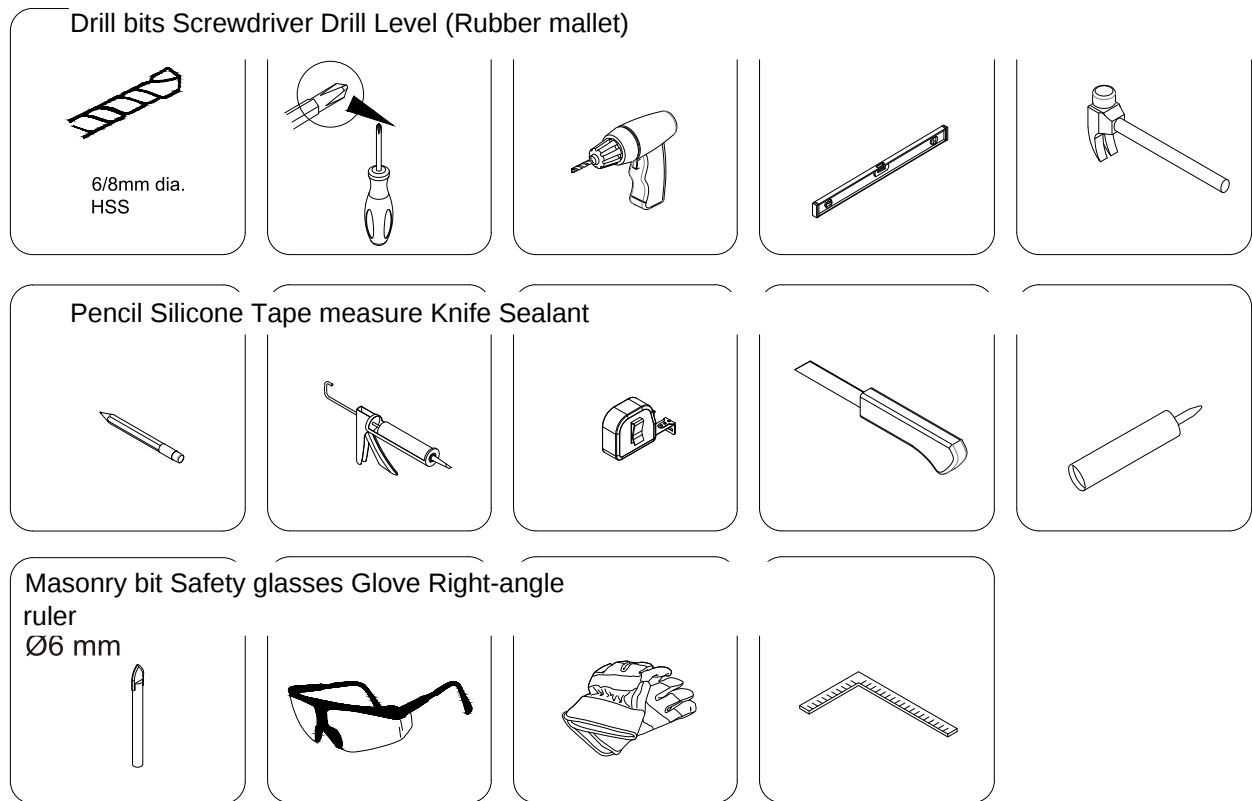

SAFETY INFORMATION

CAUTION

serious injury when handling this product. To minimise these risks, keep in mind:

* Always wear safety glasses and gloves when handling.

* Always read and follow every step of the installation instructions. Inspect all contents and the glass for damage before installing.

* Use extreme caution when handling the glass during installation, as tempered glass may break if it comes into contact with a hard surface.

? Handle tempered glass with care. If handled incorrectly, the glass could suddenly shatter into small fragments (never into sharp pointed pieces).

* Always take precautions not to touch the tempered glass with any tool during or after installation.

* Do not cut or modify the tempered glass, as it will shatter if cut.

* Carefully remove the product from its packaging and keep the packaging until installation is complete.

* Inspect all parts for damage; if the unit shows damage before installation, contact the

* Install the shower on a level floor capable of supporting the weight of the unit and a person.




* Check local building codes and compliance standards before installation and make sure to comply with them.

* After installation, and periodically thereafter, check the fit and finish of the glass to make sure nothing has become loose since installation.




* Keep this installation manual for future reference.

NOTE: Heavy product. At least two people will be needed to install this unit correctly.


INSTALL THE WALL SIDE FRAME
AND THE BOTTOM BAR

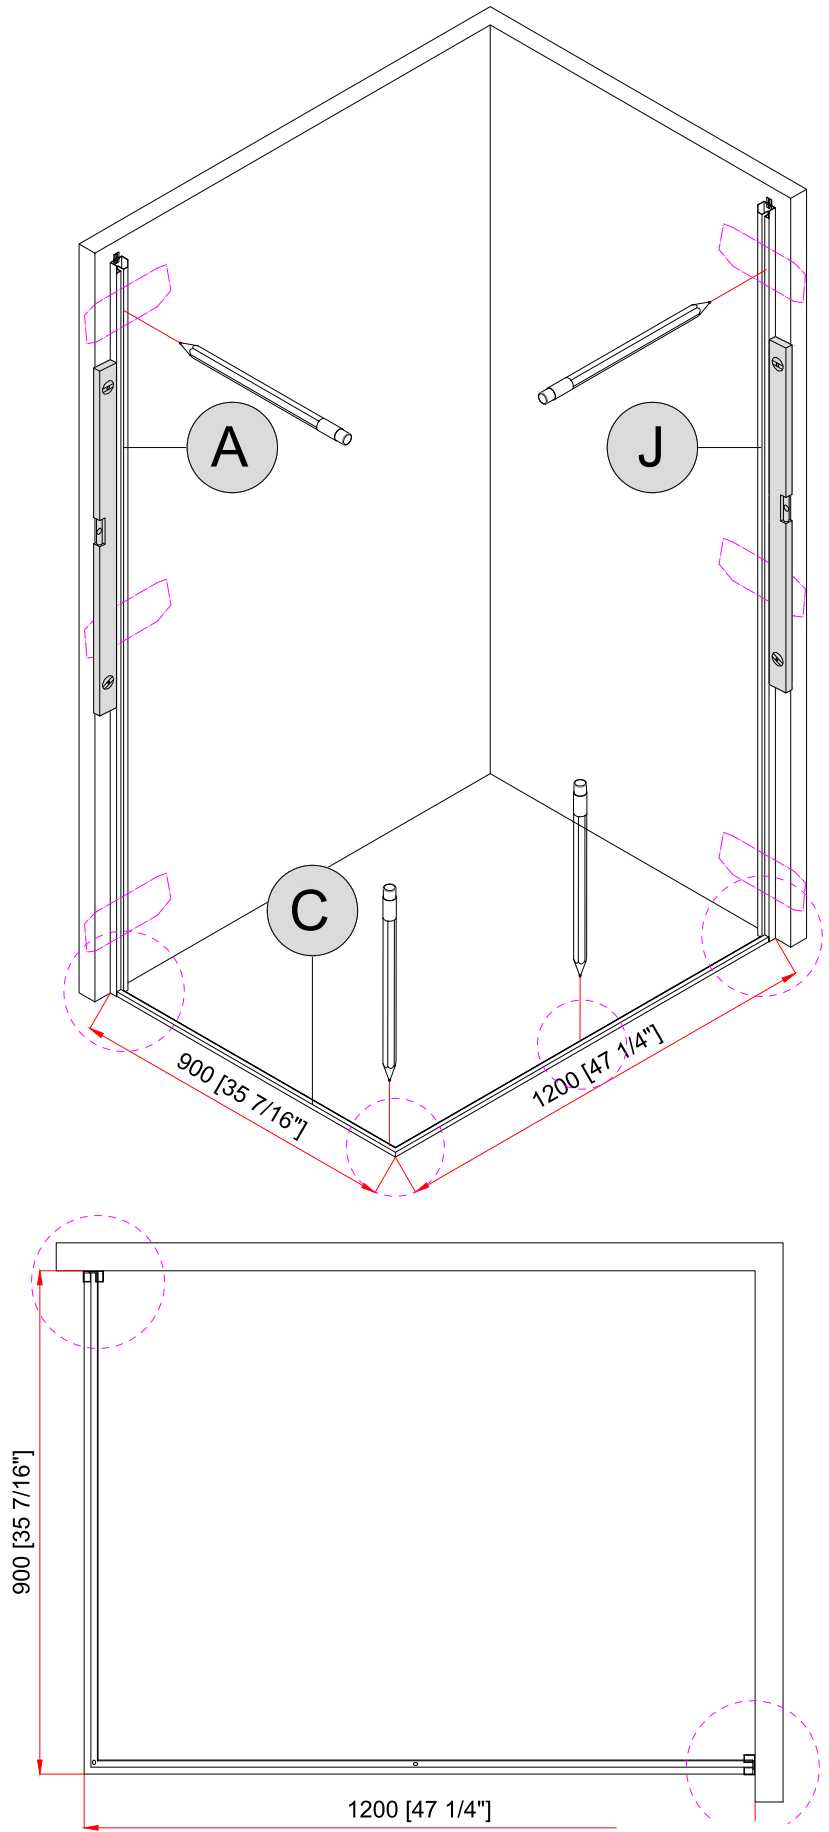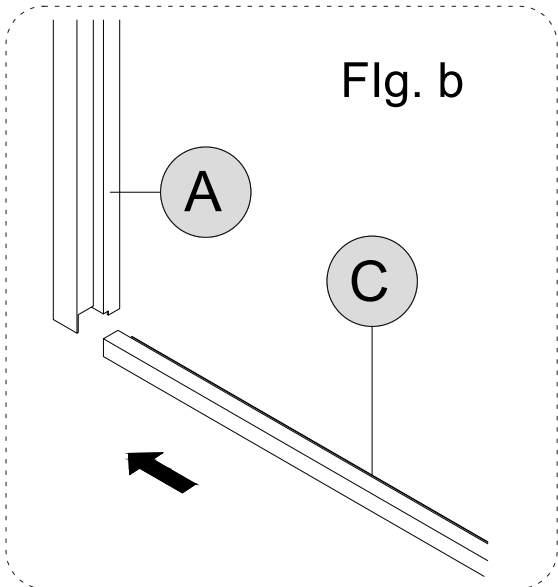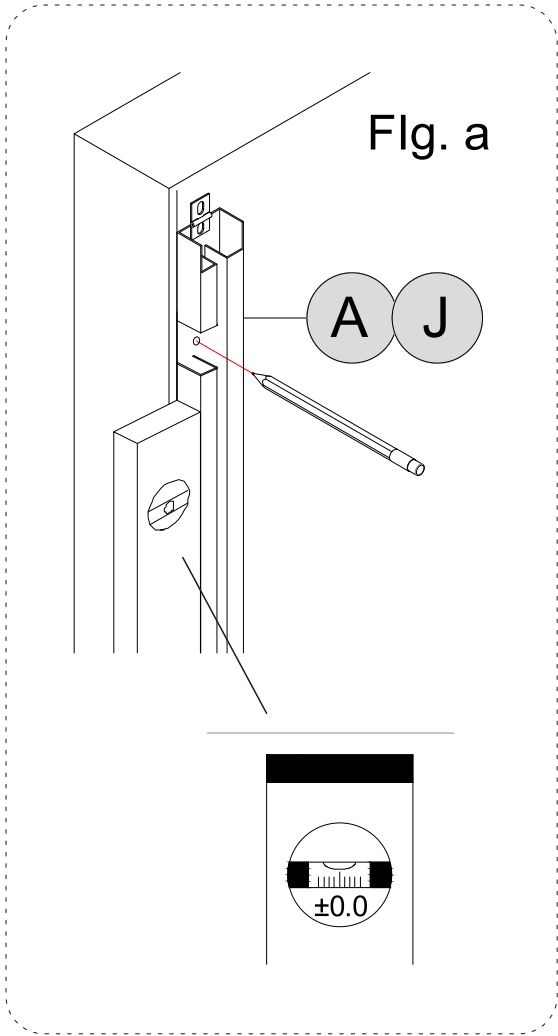




INSTALL THE WALL SIDE POST
AND THE BOTTOM BAR

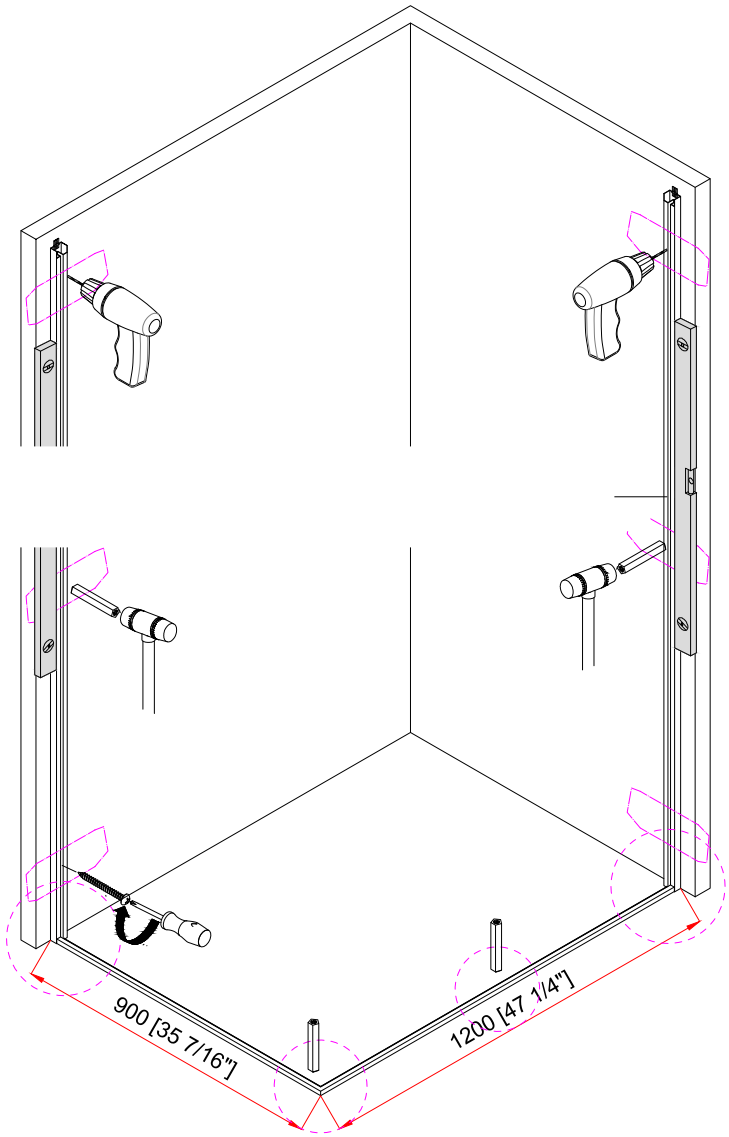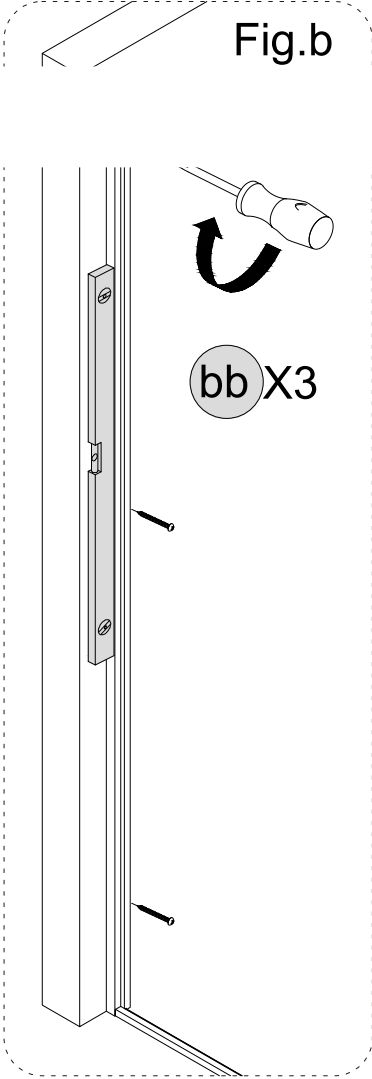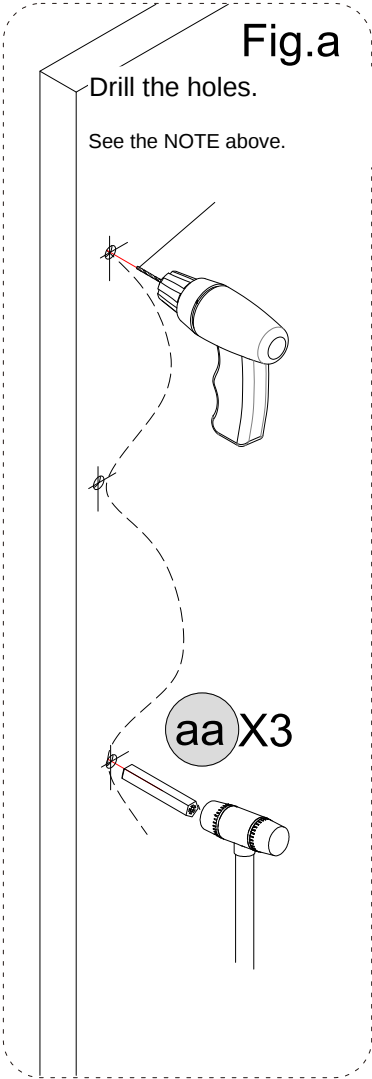



INSTALL THE FIXED GLASS

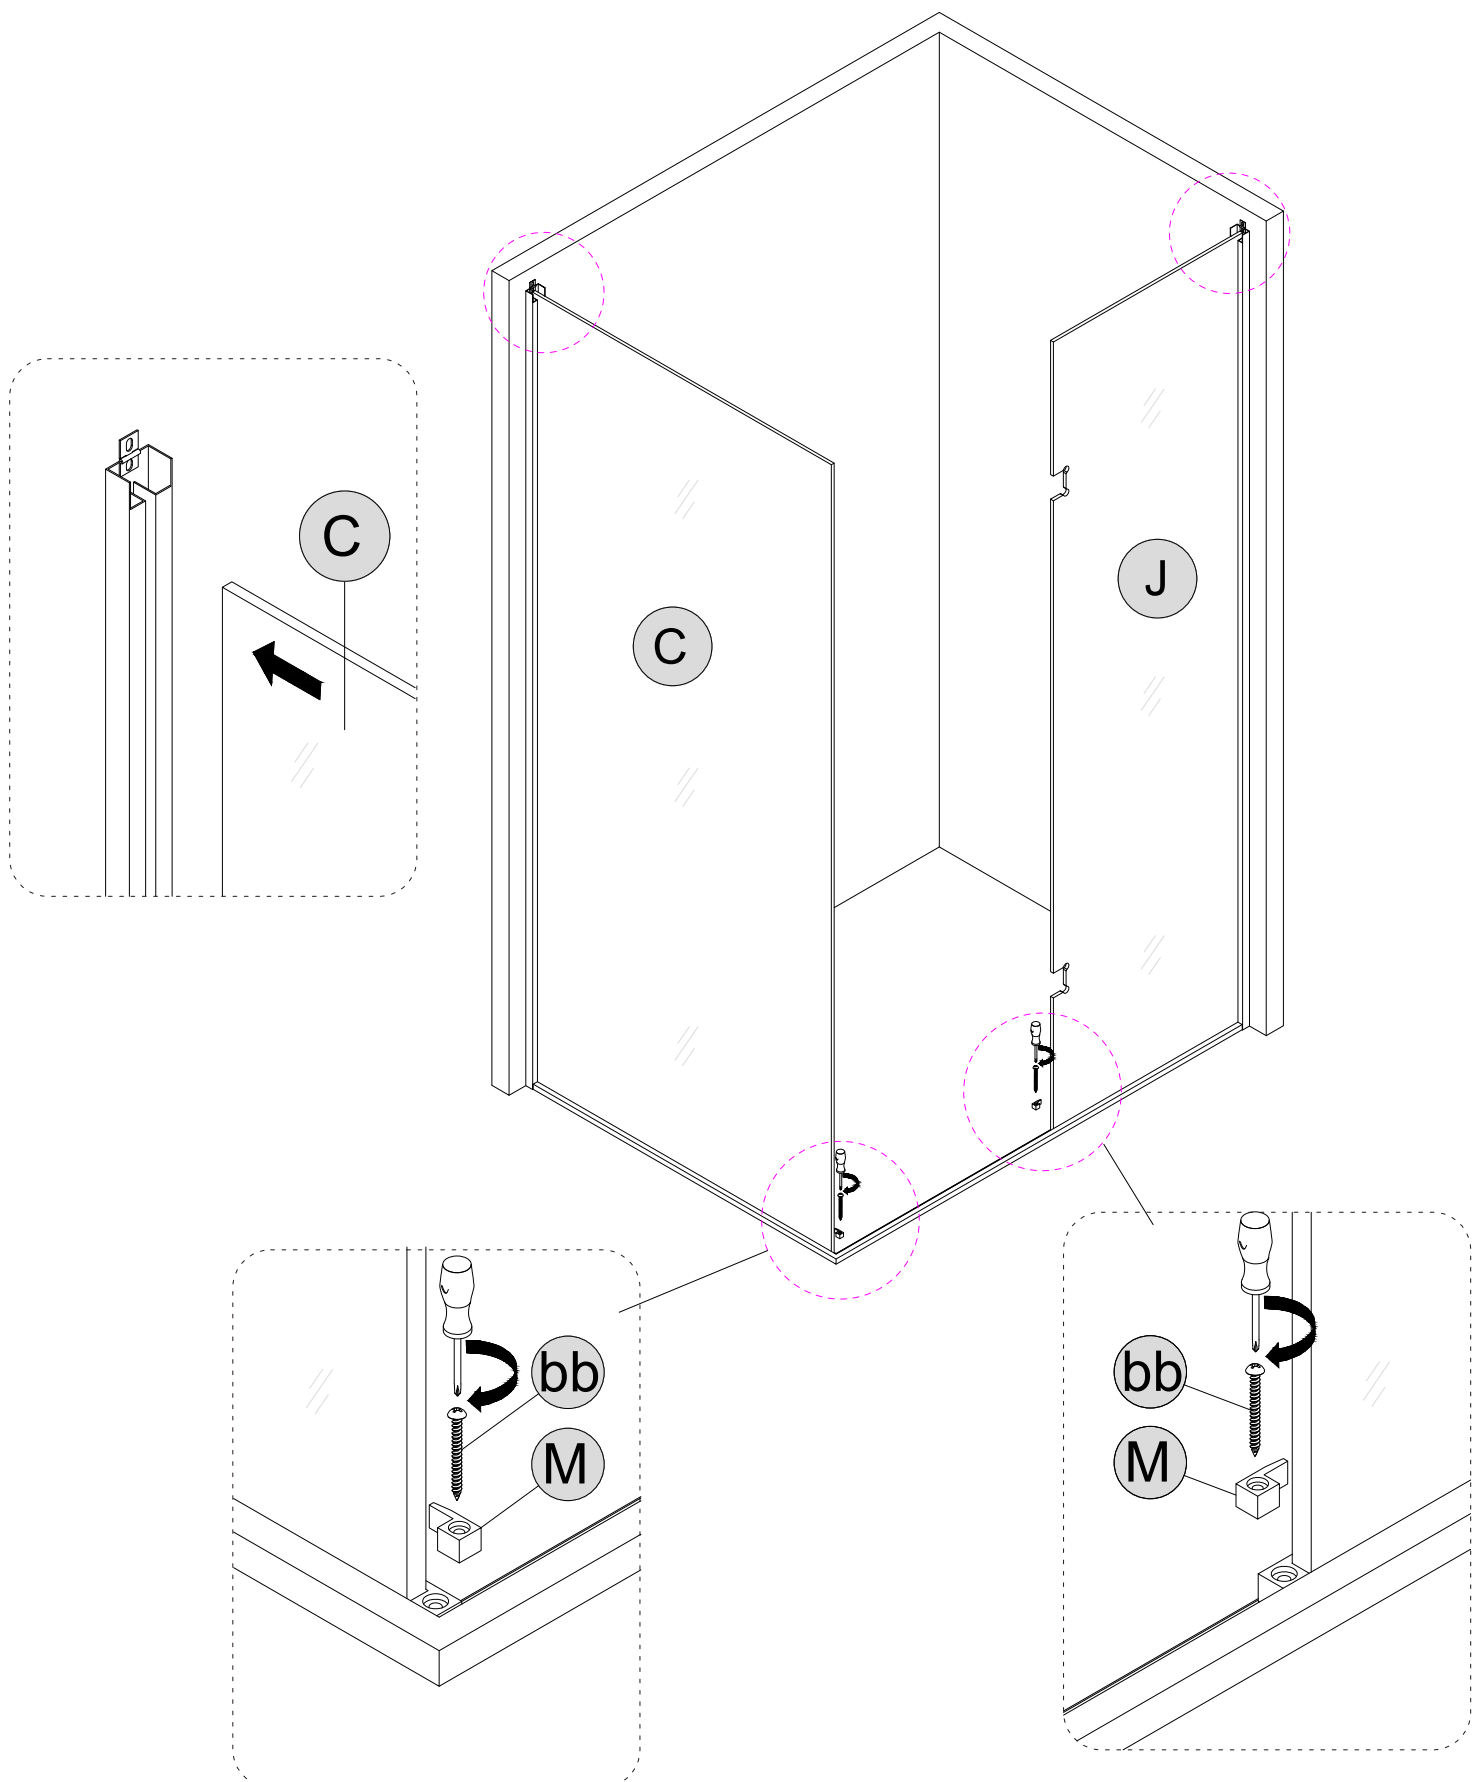





INSTALL THE TOP BAR

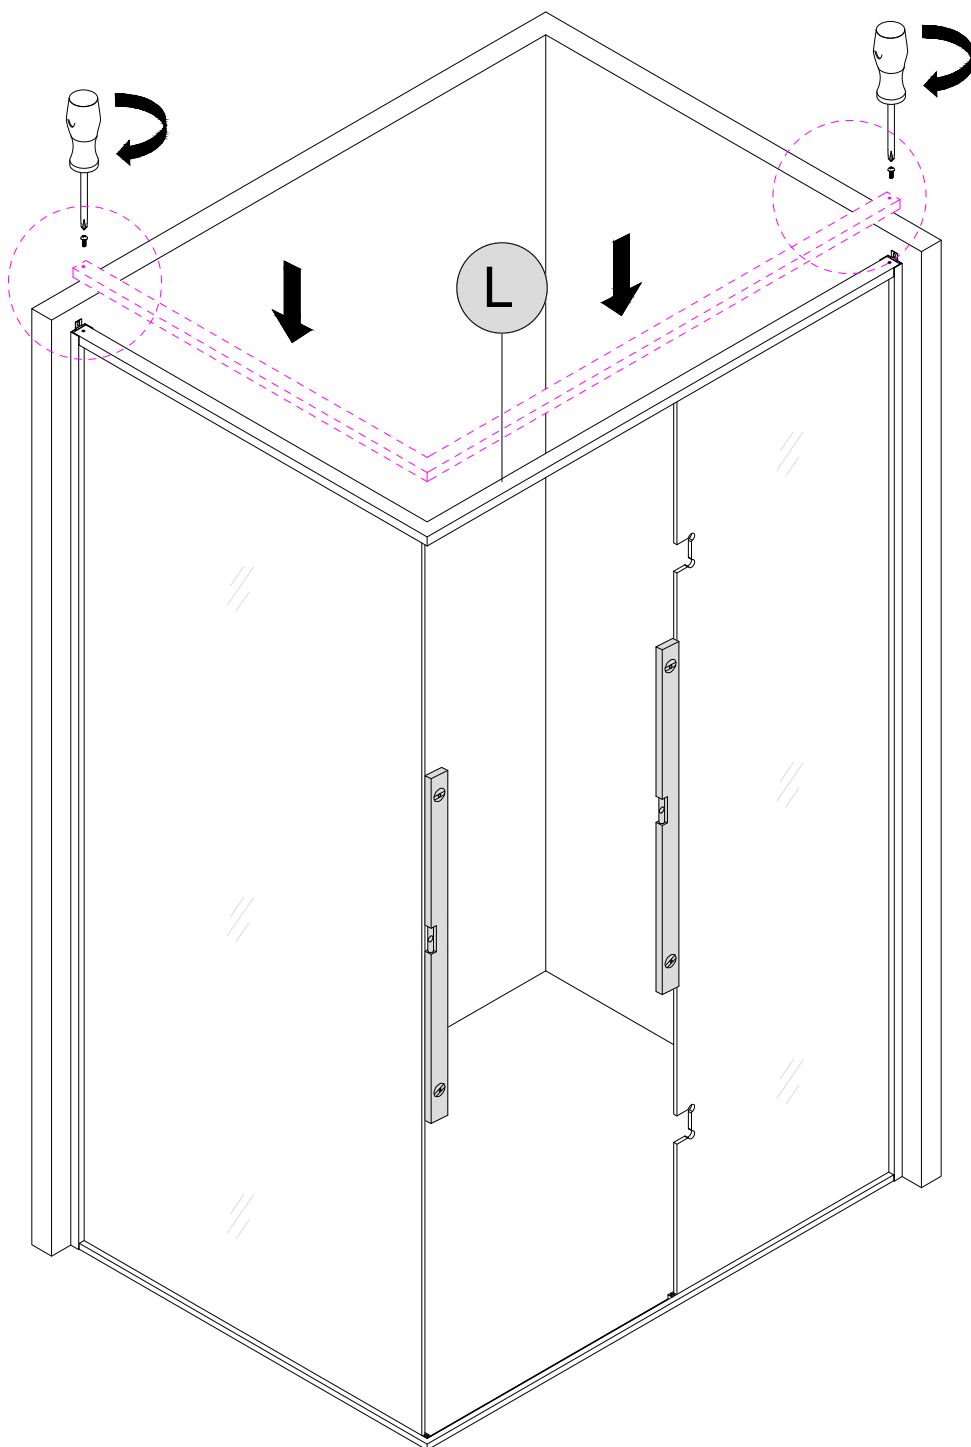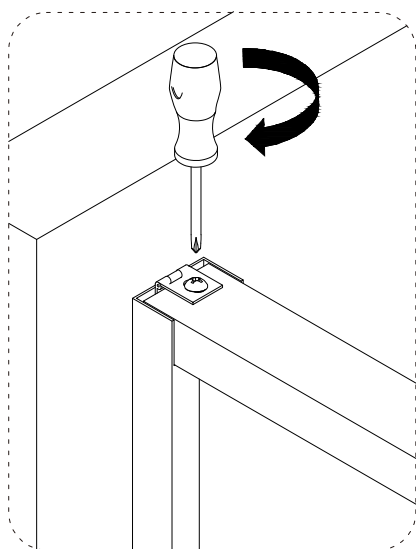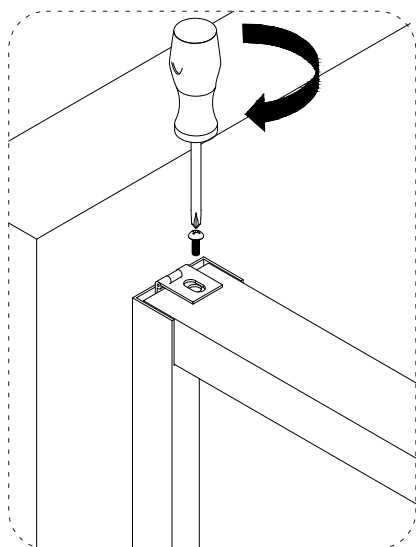

INSTALL THE HINGE AND THE DOOR GLASS

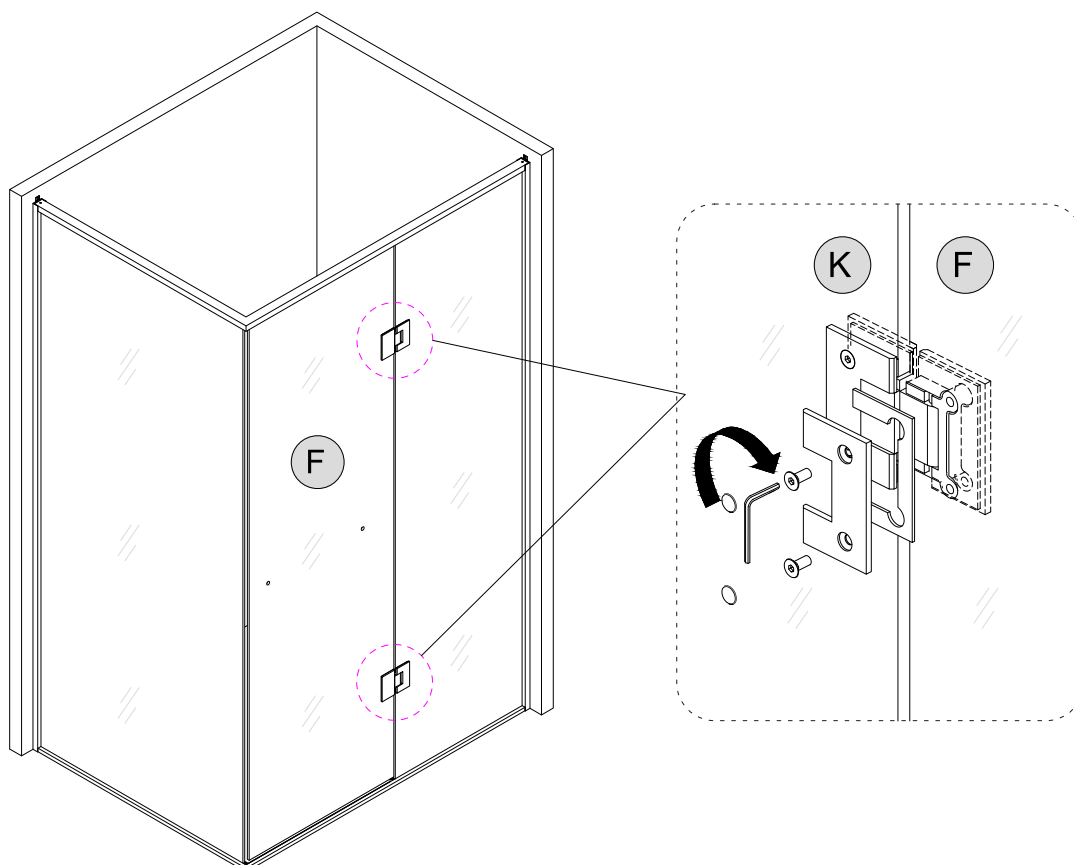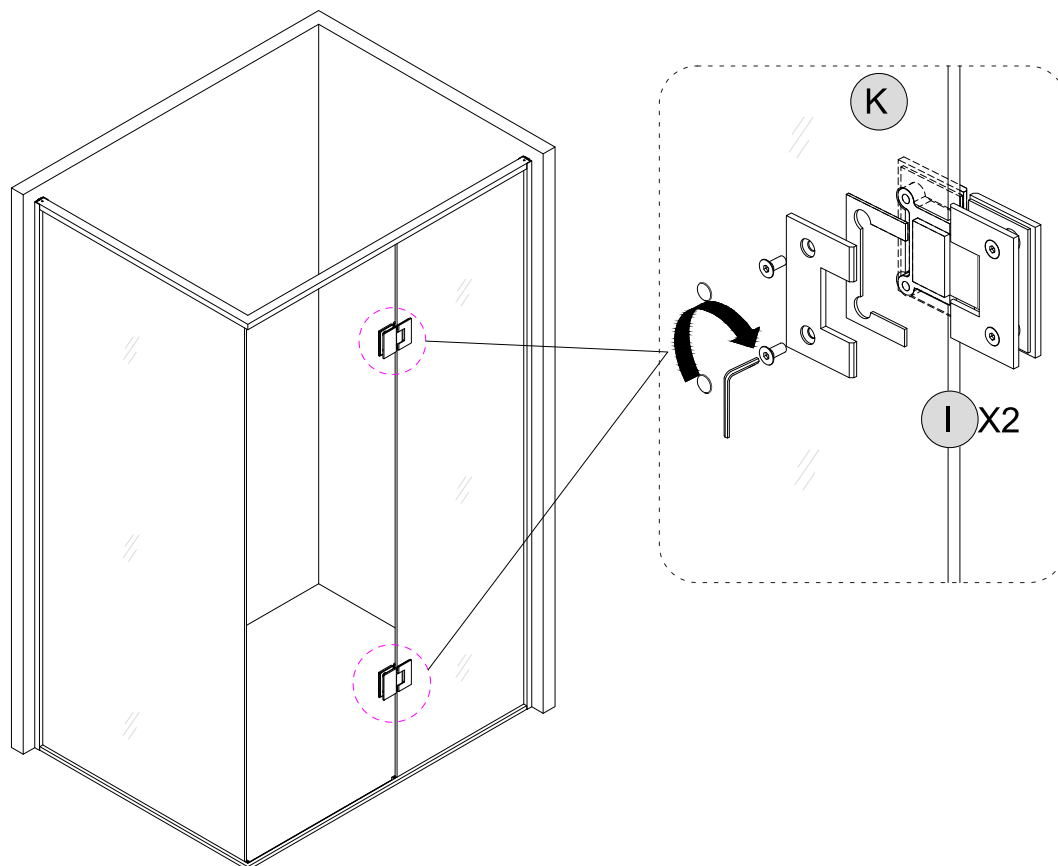

INSTALL THE VERTICAL SEAL, THE MAGNETIC STRIP,
THE BOTTOM SEAL AND THE HANDLE

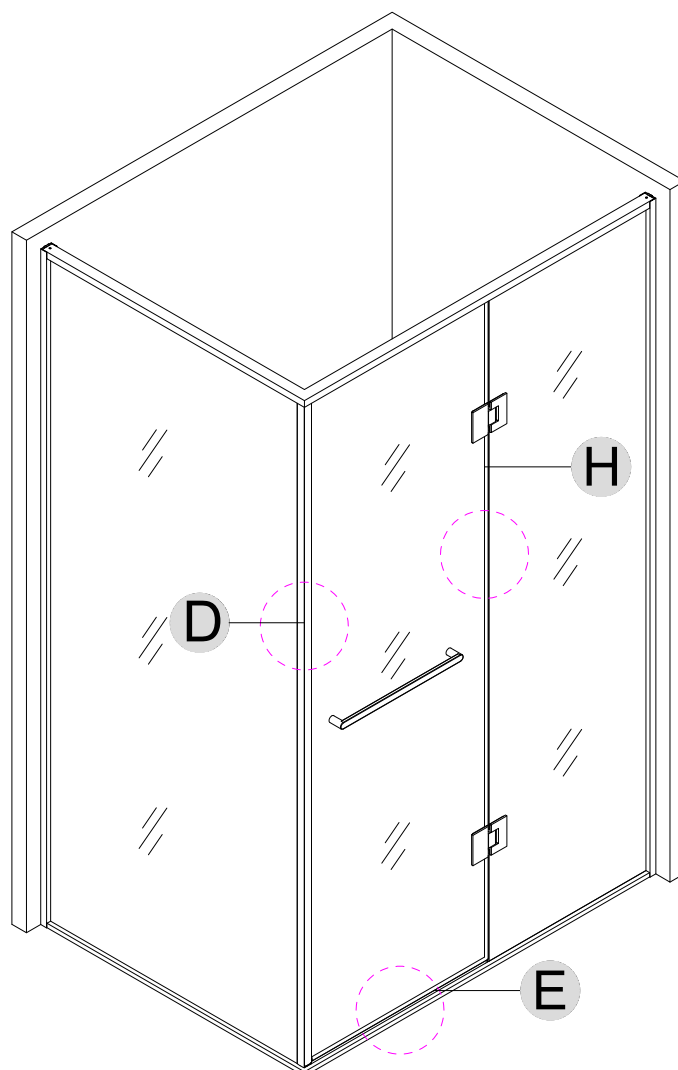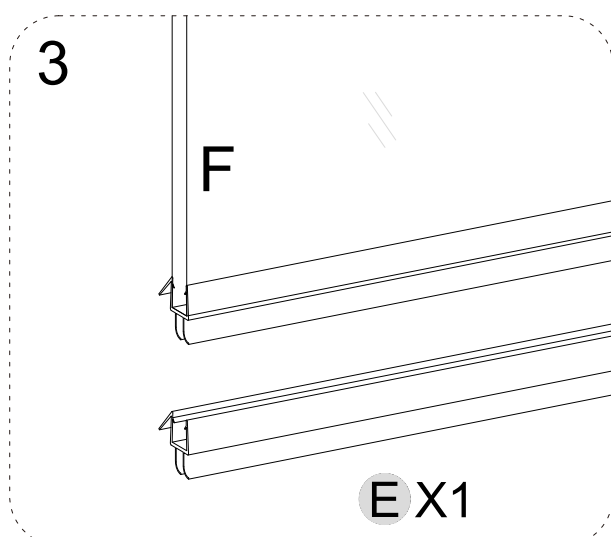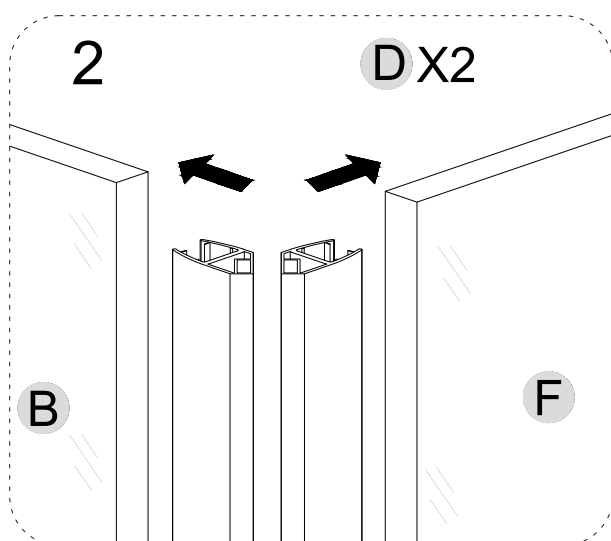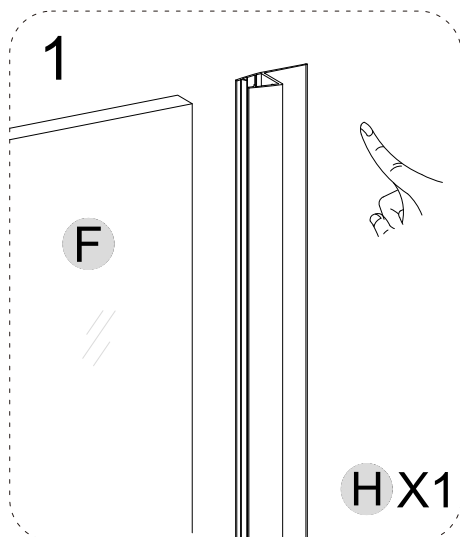


SEALING

? Make sure the shower door closes tightly and opens smoothly.

? Apply a good-quality silicone sealant along the fixed panel.

* Let the silicone dry for 24 hours before using the shower.

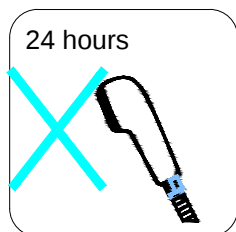

! Apply sealant
de silicona
(not included).

